


# KOMODA KOMBINOVANÁ č.F152


840x1502x430

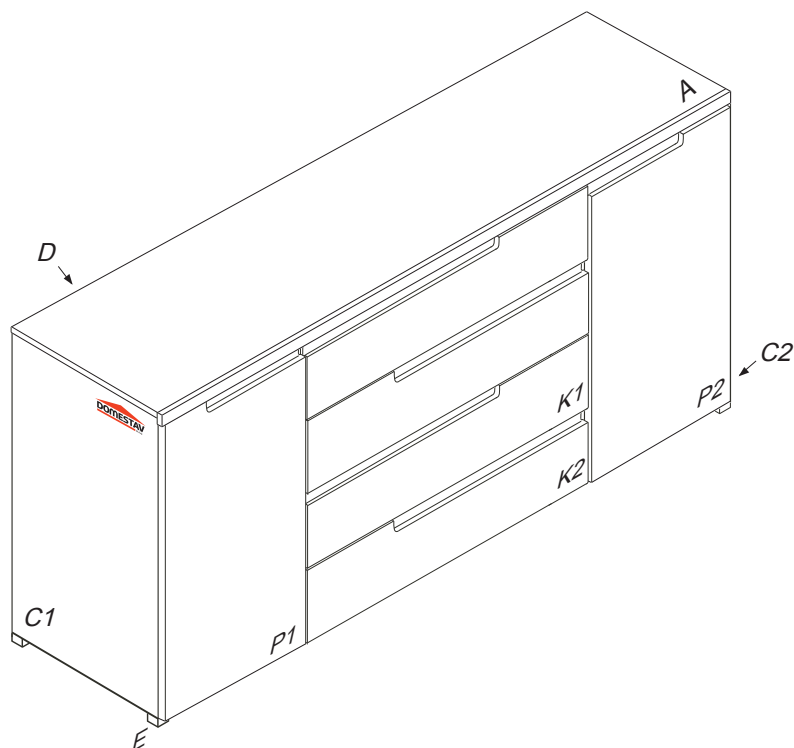

Kolíky vždy narazte nejprve do otvorů ve hranách dílců, je nutné je zarazit se stejným přesahem. V případě, že některý kolík přesahuje, je nutné jej zakrátit. Dílce srážejte kladivem pouze přes dřevěnou podložku.




	3 x1 3mm	4 x1 4mm	6 x80 8x35mm	22 x24 3,5x16mm	23 x24 EU 6x16mm
	60 x52 15mm	61 x52 DU 2	67 x6	70 x36 5x40mm	71 x12 7x50mm
80 x4 400mm		75 x4	76 x4	85 x8	92 x100 1,4x20mm
					120 x8 filc

1/5

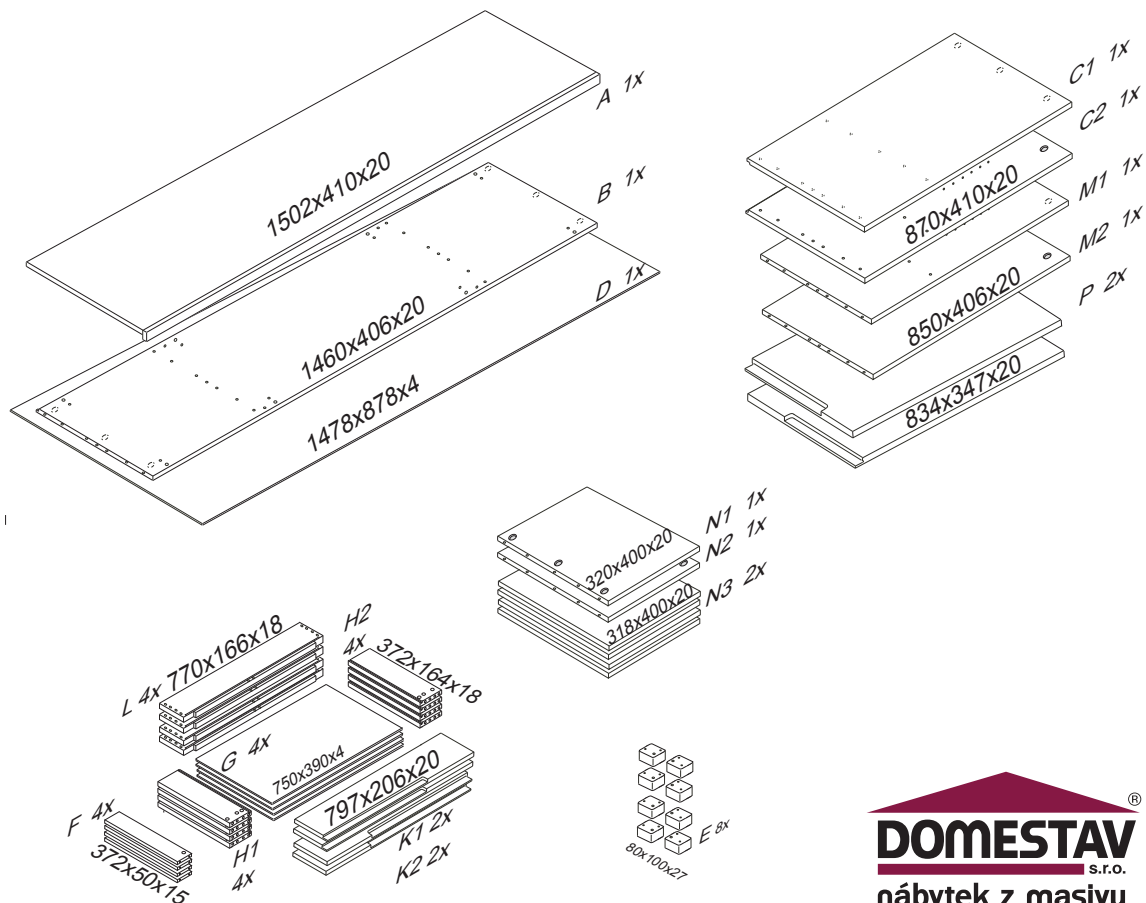

F152


2/5

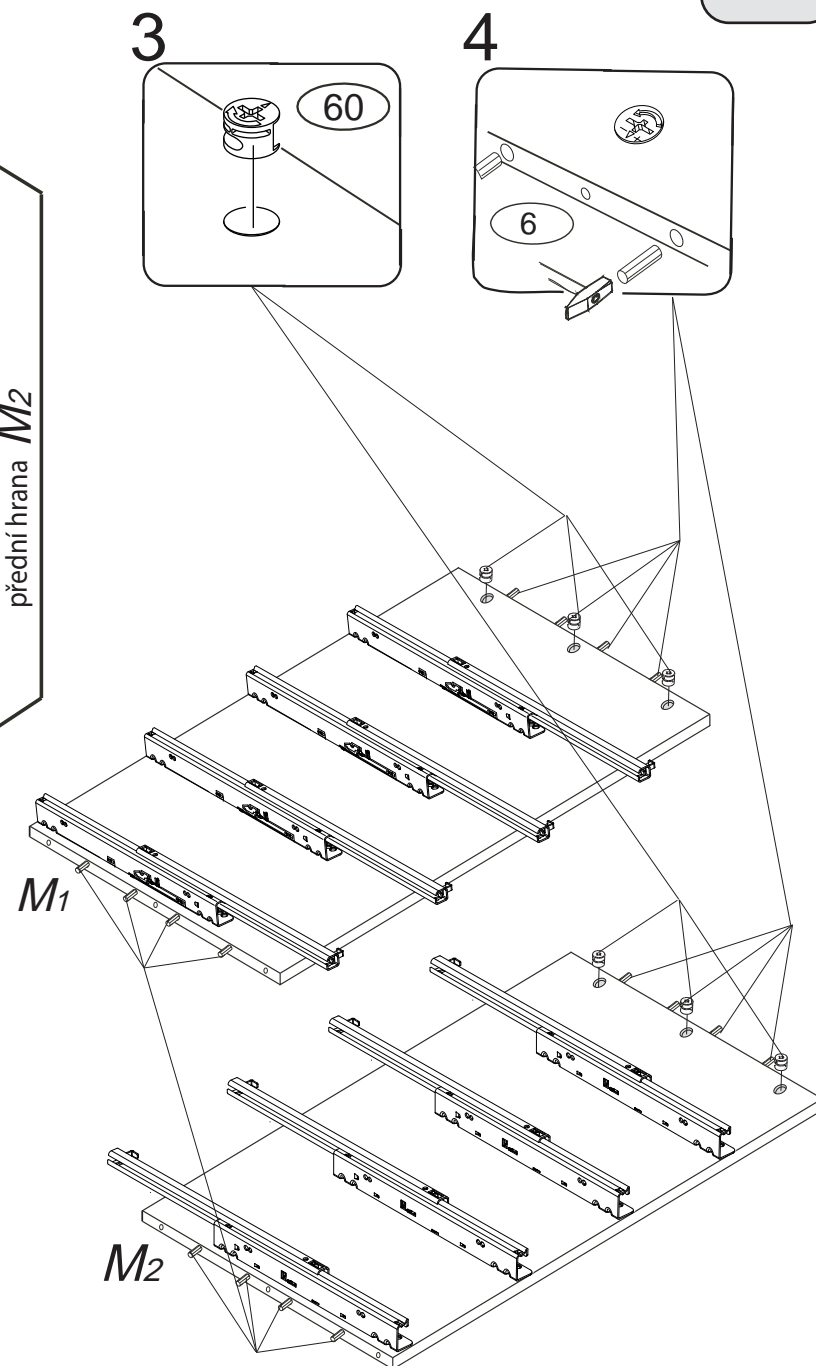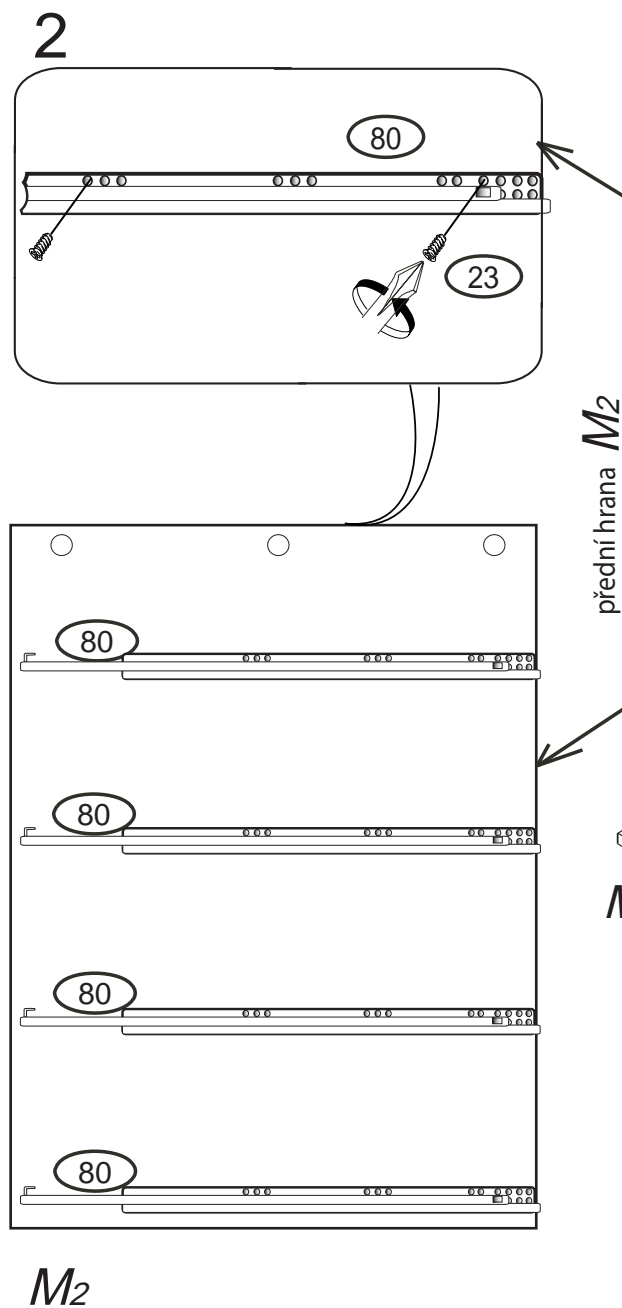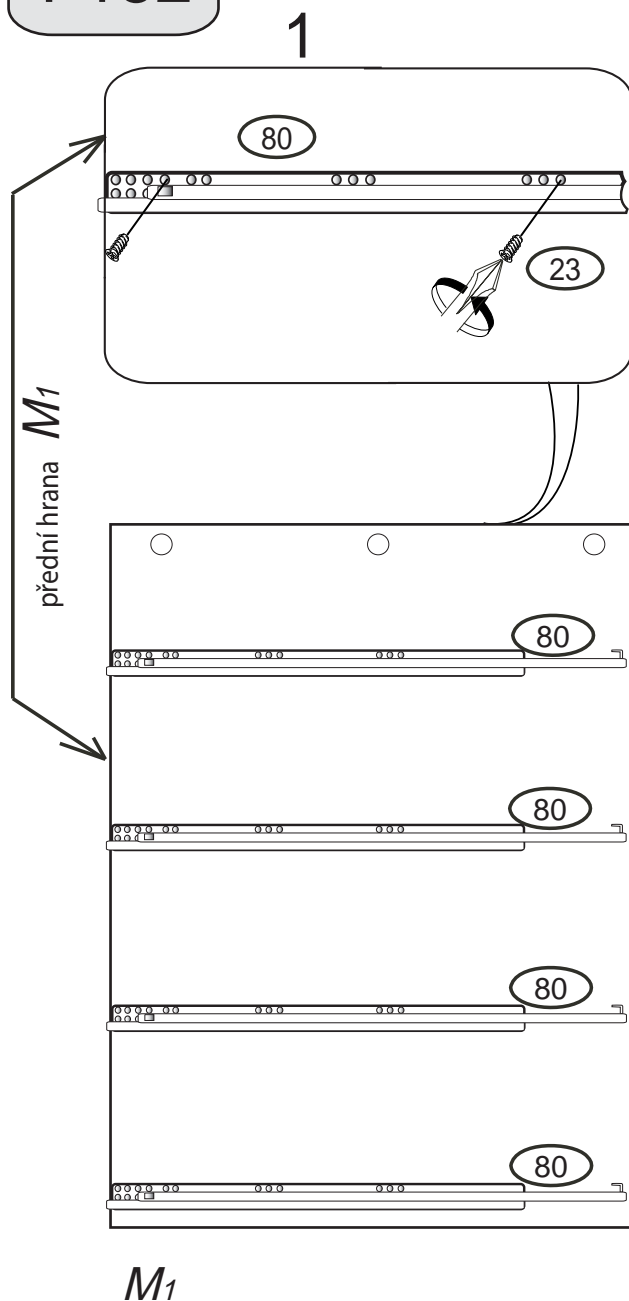


F152

3/5


5

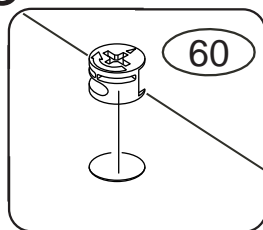


6

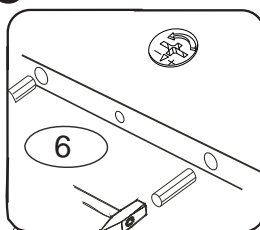


7

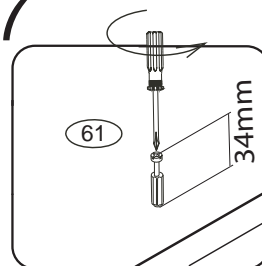




8

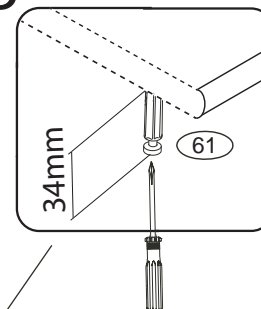


11

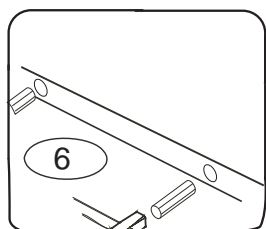



12

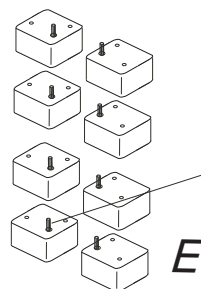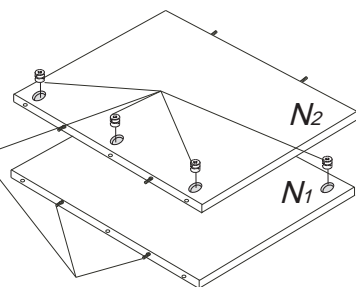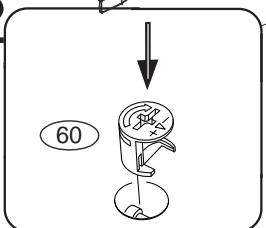

9

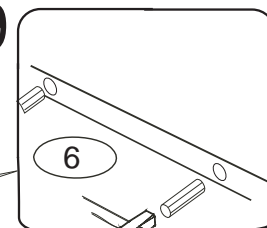

10

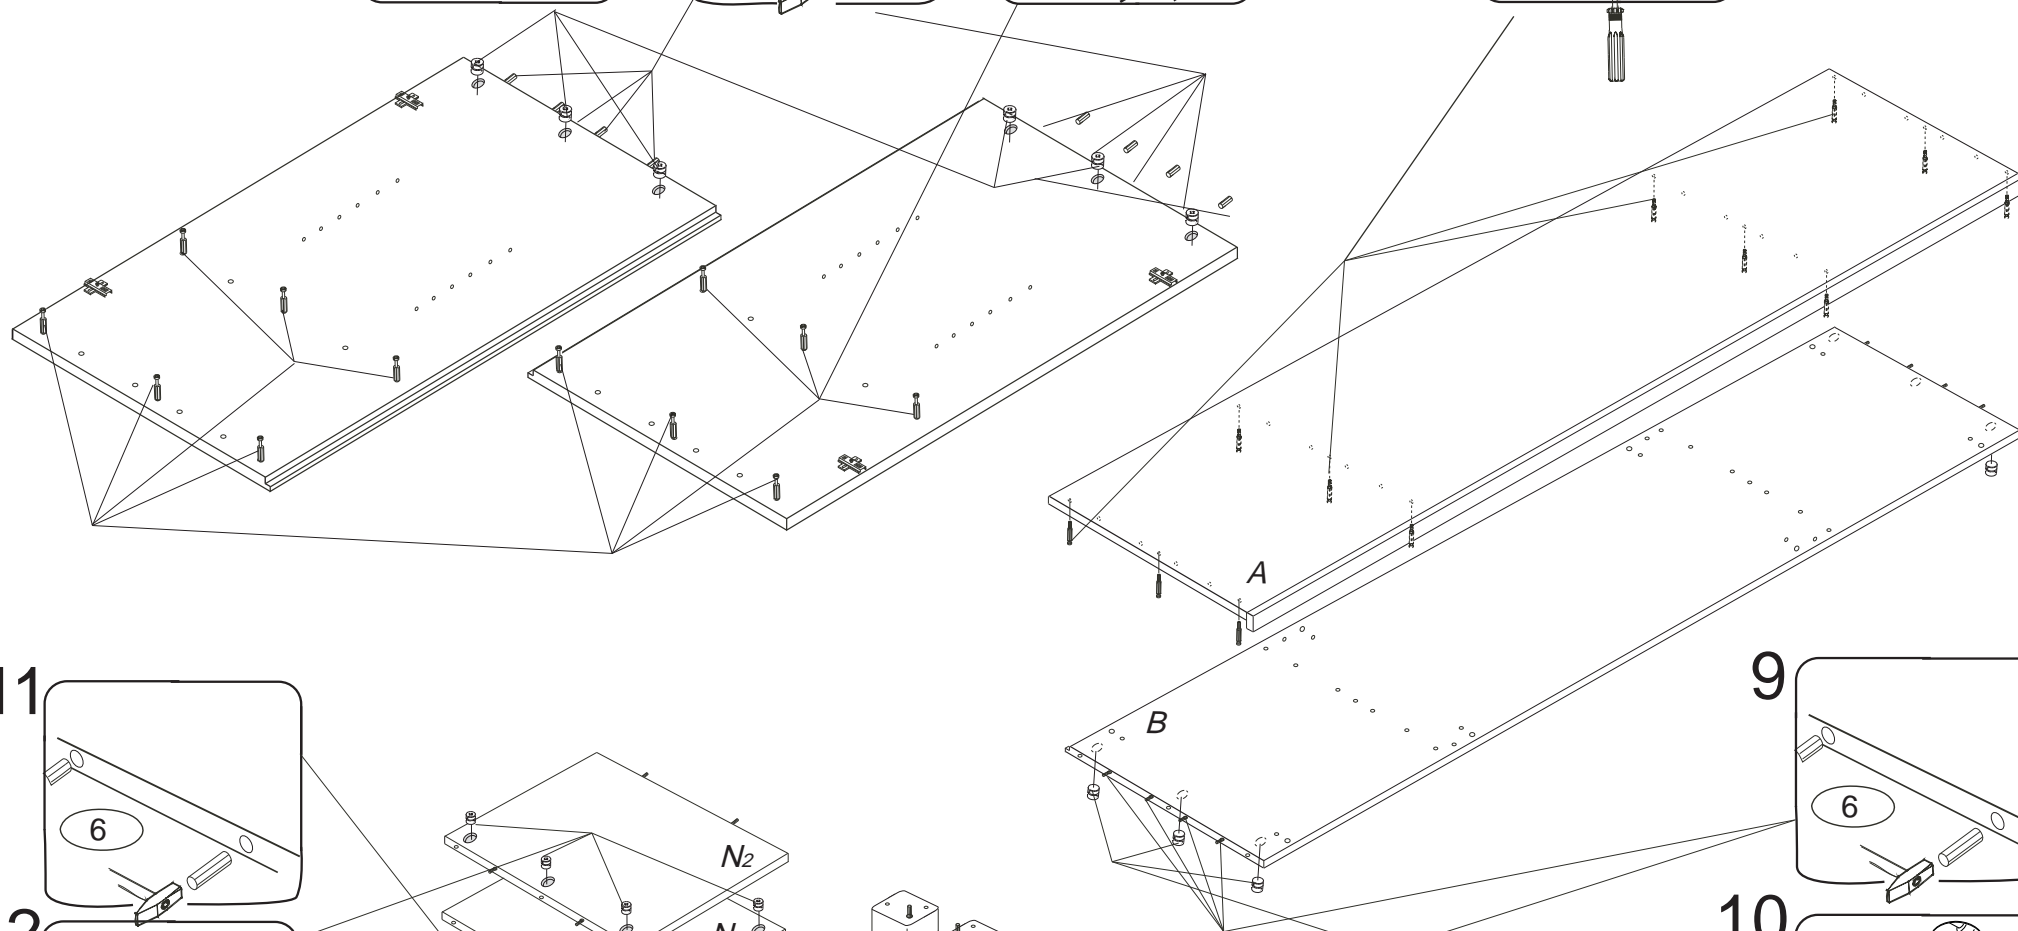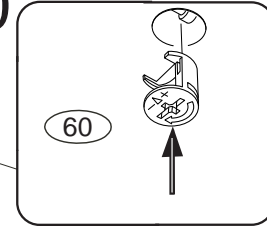

F152

14

16








18

19


20

21

4/5

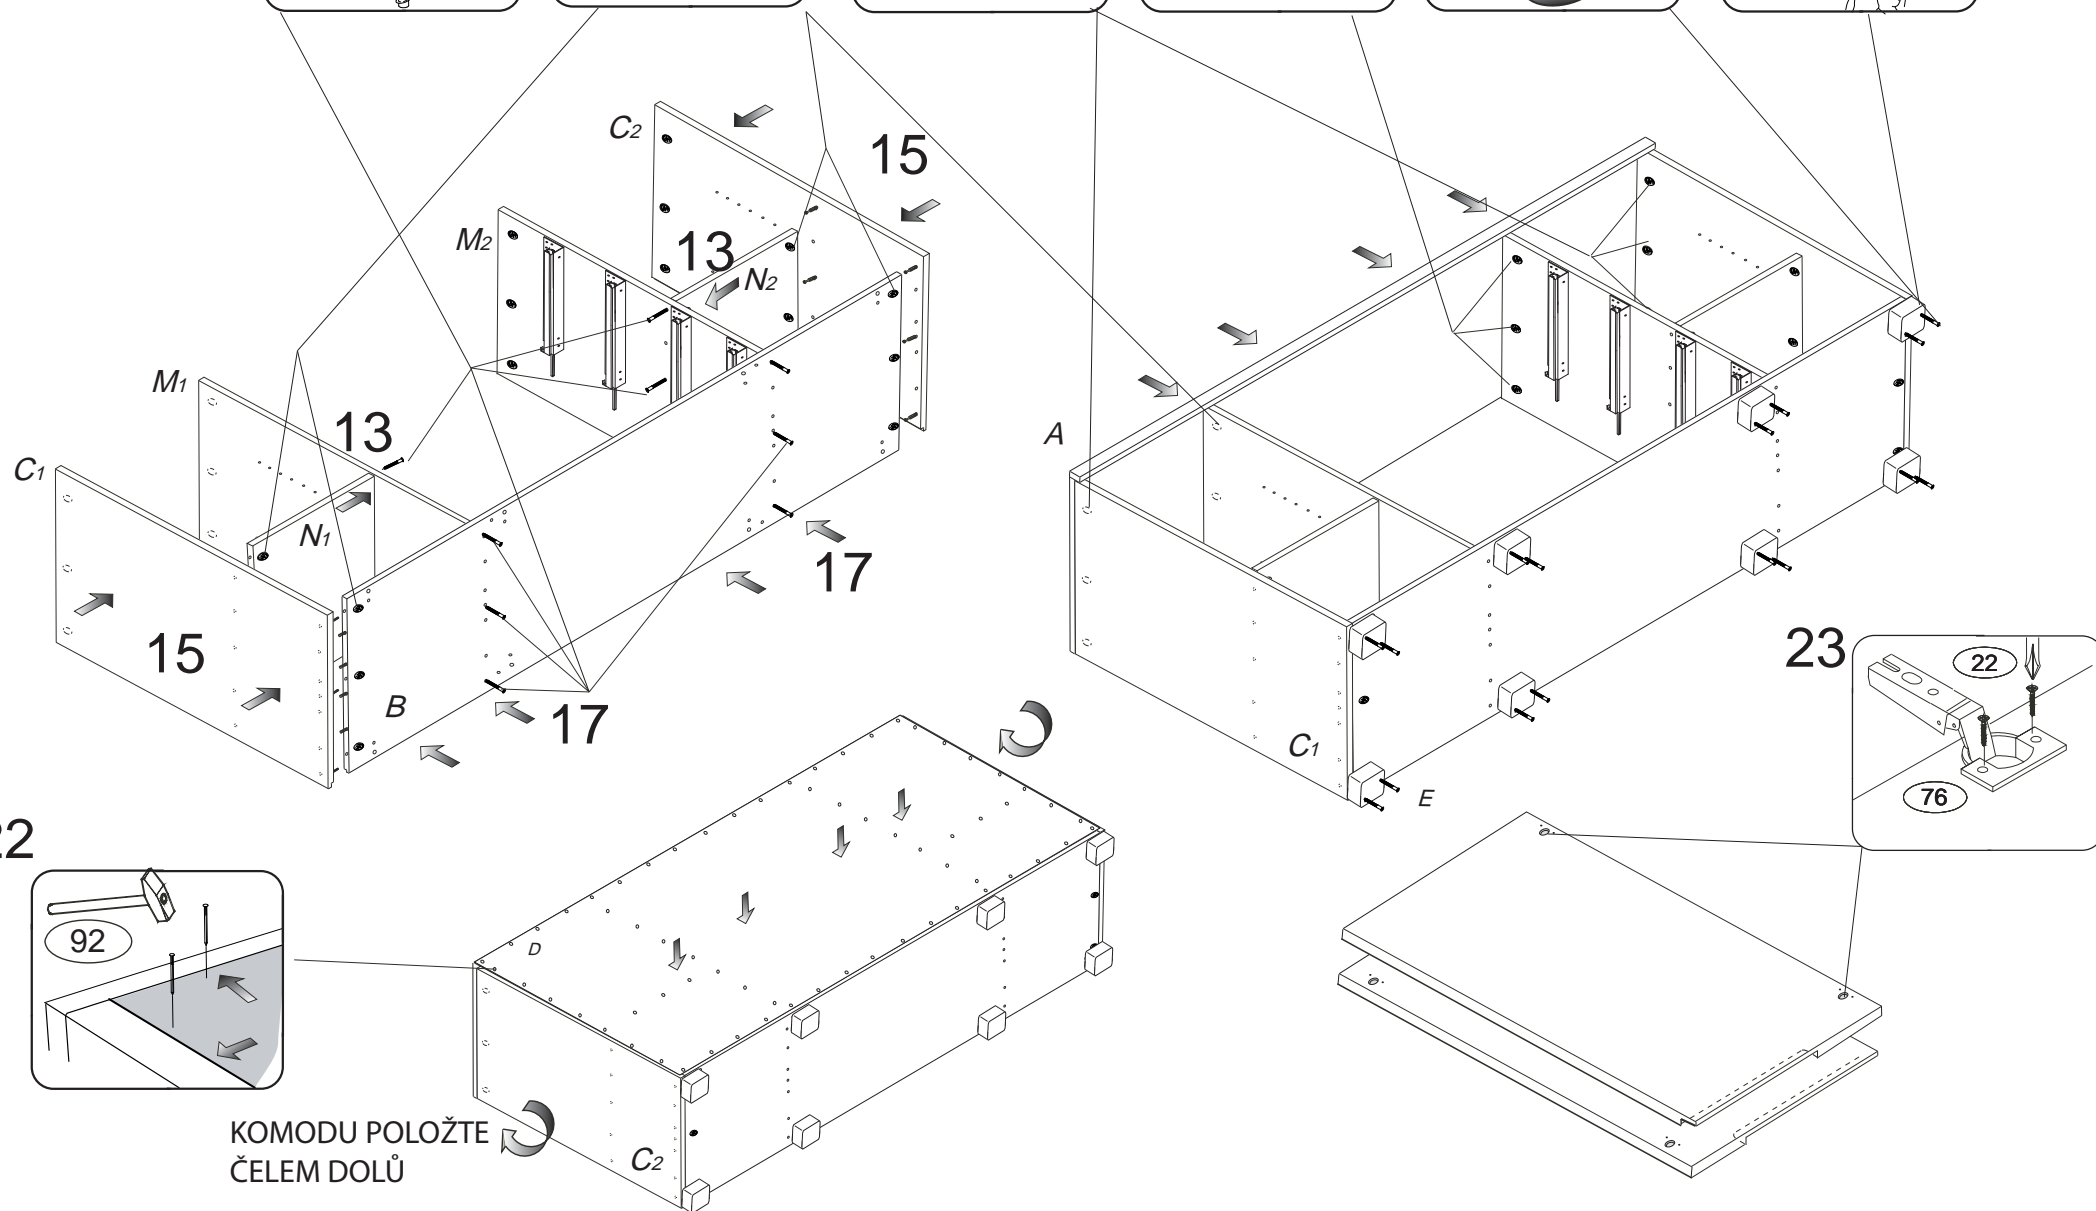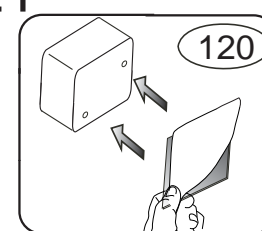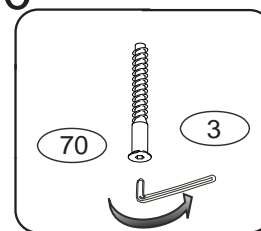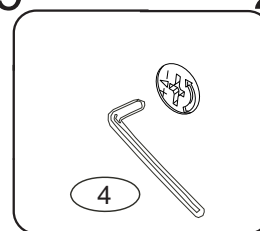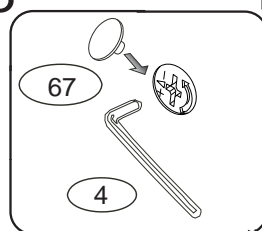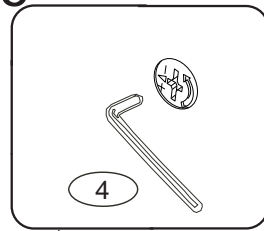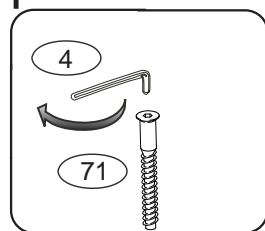


22

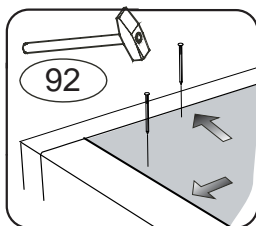

KOMODU POLOŽTE  
ČELEM DOLŮ

23

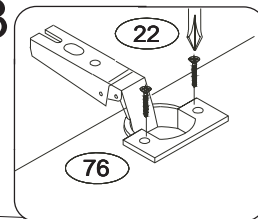

F152

25






26

28


31

32




5/5

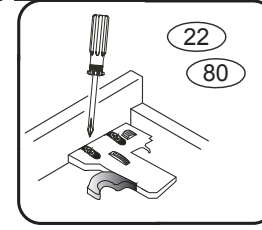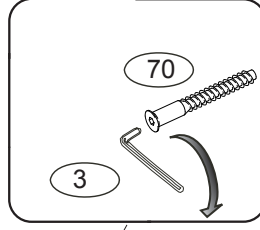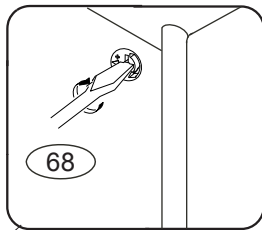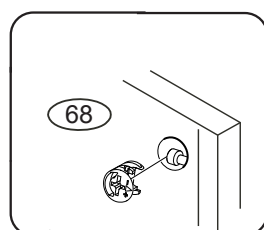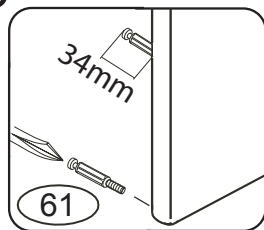


ZÁSUVKU POLOŽTE  
DNEM NAHORU

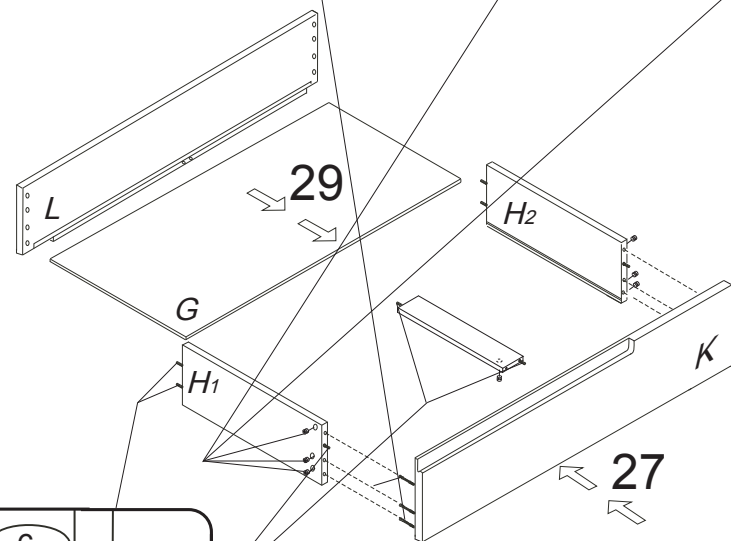


24

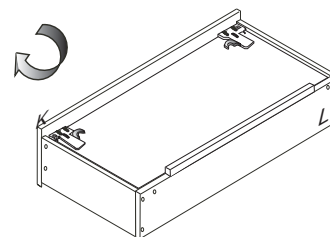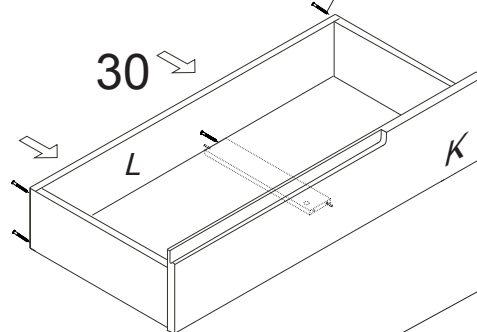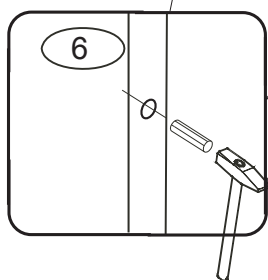


35

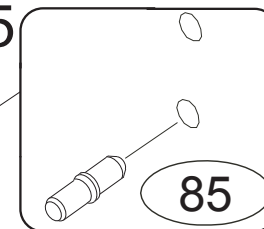

37

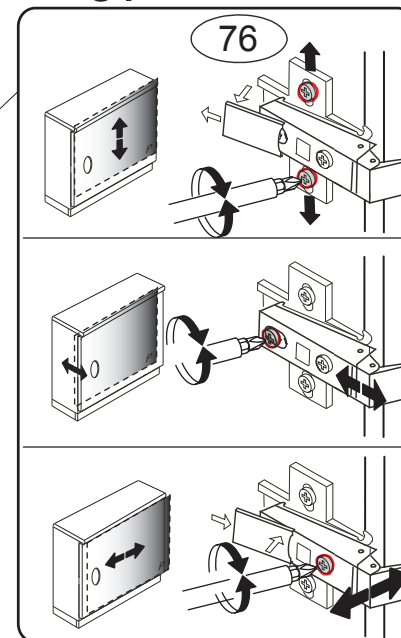

34

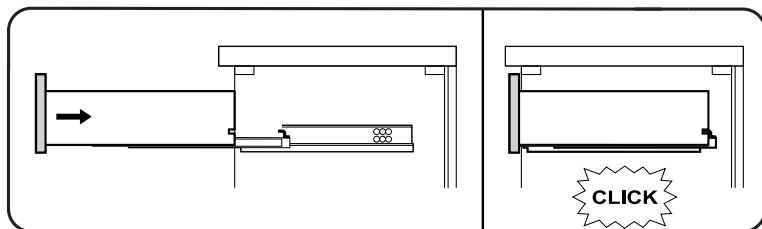

Na vysunuté pojezdy  
nasadte zásuvky.  
Polohu zásuvek upravte  
červeným kolečkem na spojce.

